

V4 QUICK START GUIDE


Wiring: Connect the Black wire to solid, clean chassis location. The Red wire must be connected to a fused 12V + ignition supply. If you wish to use the remote input for scramble/memory change or boost cut, the blue must be connected in such a way that it switches to earth/negative to engage.

Setting a Boost Memory:



1) Press the Down button until the memory display displays the memory number you wish to adjust. Wait for ~5sec for it to complete displaying the present set boost.

2) Now HOLD the Down button until the display changes to the setting screen like Fig2.

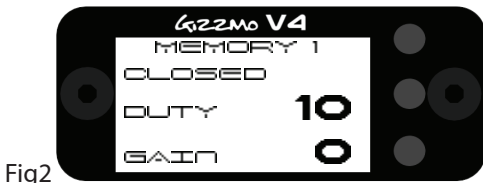


Upon entering the setting mode, 'Closed' or 'Open' will be flashing. If 'Open' is flashing, press the Up button once to change to 'Closed'.

3) Press 'Enter' to progress to the 'Duty' selection which will now start flashing. Adjusting this is as simple as pressing the UP (+) or Down (-) button. Obviously start at a lower duty and work your way up (noting that more duty = more boost)

TIP: Whenever you adjust the duty in the setting mode you can then drive the car in 3rd or 4th gear at sufficient revs and the V4 will display the boost pressure on the setting screen temporarily, this makes it very fast to set up.

until you are happy with the boost pressure.

4) When you are happy with the duty, press enter again and the 'Gain' selection will start flashing (we'll come back to that later), ensure this is set to zero and press 'Enter' again.

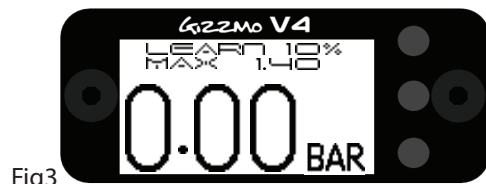

5) The V4 will return to a similar screen to the running screen with the exception of the top two lines of the display. The top line displays the duty cycle you have set that the V4 needs to learn the boost for. The second line displays the maximum STABLE boost that the V4 has seen at the above duty cycle. Drive the car again in 3rd or 4th gear until such time that the 'max' stable boost no longer increases.

6) Pressing any of the three buttons at this point will lock the stable boost setting to the selected memory. Upon doing this the V4 will display a confirmation of the locked setting. If you're happy with the setting, you now set the gain (this is optional).

7) Cycle through as before until you enter the 'Gain' selection in the setting screen.

NOTE: Gain is How hard/fast the boost is brought in. It should NEVER be higher than duty cycle. In fact we have found the best setting is below 10. If gain is too high the boost will either overshoot, or the maximum stable (Target) boost will be unstable. If boost starts to creep or spikes too much, drop the gain back. If the boost increases slightly after adjusting the gain, it may be necessary to decrease the duty a little.

8) Again use the Up and Down buttons in the same manner as you did to adjust the duty and then press Enter to exit the setting mode in order to try the new gain setting.

9) If the gain is not to your liking you will have to repeat steps 7 and 8 until it is.

NOTE: If you get duty cycle over 50 and the boost level is not increasing, then you have either not plugged in the solenoid, not plumbed it in correctly or have a mechanical setup not able to achieve the desired pressure.

This page as a pdf



Show us some Facebook love



Scan QR for full instructions

